

Bo!ng

Take your turntable to the next level: Gett!, Rega & Clearaudio.

IMPORTANT: Remove lid & platter & secure arm & cartridge.

Bo!ngs Enclosed: 3-Spring Bo!ngs (2 of); 6-spring Bo!ng (1 of).

6-spring Bo!ng goes to Rear of turntable.

Preparing Bo!ngs: Fit Screw, lock washer and nut. Tighten firmly – Diag "A"

Screws:

Gett! 3 x 30mm Screws.

RP3 & 6, Planar 2 & 3 (NOT RP 10): 2 x 30mm (Front), 1x 35mm Screw (Rear).

Clearaudio: 3 x 35mm Screws;

In all instances, **6-Spring Bo!ng** goes to the **Rear**;

Note: **RP1 / RP2:** All **Bo!ngs** are 3-Spring: select the 6-Spring Bo!ng, remove cover plate and remove 3 alternate springs. Replace cover plate)

Gett! & Clearaudio: Remove feet.

Rega: Unscrew feet. Use the Rega screws to fix the adapters to the plinth – Diag "B&C"

Screw Bo!ngs all the way into threaded inserts. Turn turntable over and re-assemble.

Level the deck by **adjusting the feet**.


N.B. Using Rega Wall mount: Rotate adapters to allow **Bo!ngs** to sit on the platform.

Also, rotate the rear Bo!ng as necessary to avoid the motor housing.


Fit the damping sponges inside Bo!ngs to control the bounce.

You should notice a real improvement as seismic rubbish is prevented from reaching the stylus.


Lift the veil on your system even more. Partner with Achromat and FiXX or FX3 arm

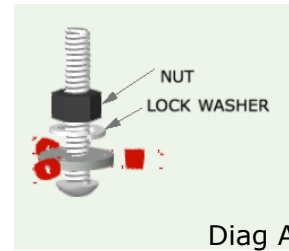

Diag A

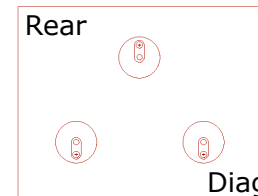

Diag C

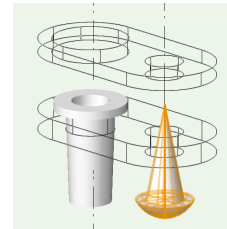

Diag B